


TP0129 Bone Shaped Electric Table

- Lifts up to 220 lbs
- 45"L x 25 1/2"W x 1" thick tabletop
- Height adjusts from 16" to 39"
- Heavy-duty steel construction
- Durable, rust-resistant, ivory powder-coated finish

Grooming Arm Assembly Instructions

Parts List:

- A.) Grooming Arm Holder (1)
- B.) Grooming Arm (1)
- C.) Large Washers (4)
- D.) Small Washers (4)
- E. Screws (4)

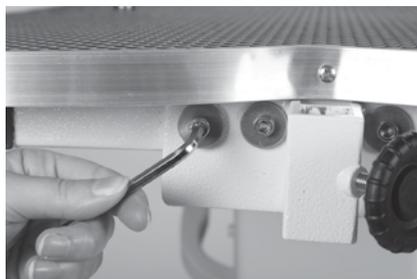

1. Connect the Grooming Arm Holder (A) to Table by lining up the holes on the Holder with the holes on the Table. Thread one Large Washer (C) and one Small Washer (D) onto each Screw (E). Tighten Screws to table.



2. Place Grooming Arm (B) in Holder (A). Use the knob on Holder to secure grooming arm in place.



Table Instructions:

SAVE THESE INSTRUCTIONS • IMPORTANT SAFEGUARDS

Basic safety instructions should be followed when using electrical appliances, including the following:

READ ALL INSTRUCTIONS BEFORE USING.

DESIGNED FOR ANIMAL USE ONLY.

CAUTION: Do not leave an animal on the table unattended. Use a grooming loop to properly restrain animal. Quick-release loops or clips are recommended to prevent injury in case animal accidentally jumps off the table. Do not use a choke-type lead or collar.

WARNING:

To reduce the risk of burns, fire, electrical shock, or injury to persons or pets:

1. Do not leave grooming table plugged in when unattended.
2. Do not allow unsupervised children to play near or operate the table.
3. Do not immerse motor in water or other liquids.
4. Unplug table before cleaning or servicing.
5. Use table only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
6. Never operate this grooming table if it has a damaged cord or plug, or if it is not working properly. If table is not working or is damaged, contact PetEdge Customer Service at 1-800-638-5754.
7. Keep cord away from heated surfaces.
8. Do not place or store this appliance where cord may be damaged by an animal or exposed to weather.
9. Do not pull, twist, or wrap cord around table base. Continuous stress on cord can cause damage and result in a shock hazard.
10. While operating grooming table, keep cord away from moving parts. If cord becomes kinked or tangled, straighten cord and inspect for damage before resuming use.

OPERATING INSTRUCTIONS:

This table is designed for use with standard 120V outlet. This grooming table also has a polarized plug (one blade is wider than the other). As an important safety feature, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to modify the plug in any way. This table is also designed with an automatic shut-off. Motor, transformer, and cord are all UL Approved. We recommend that this table be used with a surge protector at all times.

OPERATING TABLE:

1. Table is fully assembled. Before use, make sure table is level by turning leveling feet under each base leg. Plug cord into any standard 110/120V wall outlet.
2. This grooming table is equipped with a remote control mechanism that lifts and lowers table to the desired height. Attach the Remote Control Holder to side of the grooming arm using the screws. Make sure to thread the Remote Control cord over the top half of the table frame so the frame doesn't pinch the cord when the table lowers.
3. To reduce strain and unnecessary lifting of large animals, it is recommended to lower the table to minimum height and let animal step up onto table before positioning table to desired height for grooming.
4. Once animal is positioned on table, place the grooming loop that is attached to grooming arm around animal's neck and adjust to fit comfortably.



CARE & MAINTENANCE:

Unplug table. Wipe off table with a sponge or damp cloth and mild cleaner after use. Recommend using mild soap and water, or a non-caustic cleaner. Periodically vacuum or dry wipe lifting mechanism to keep it free from hair and debris. Base can also be cleaned when needed with damp cloth or sponge. Dry off any excess water. Check electric cord and plugs for signs of damage or water.

LIMITED WARRANTY

This Master Equipment™ Bone Shaped Electric Table is warranted against defective material or workmanship for one year from the date of purchase. Any Master Equipment™ product that is determined to be defective in material or workmanship during the warranty period will be replaced without cost to the purchaser for parts or labor. Please contact PetEdge Customer Service at 1-800-638-5754 regarding any defective product. PetEdge will not be liable under this warranty for any defect, failure or malfunction of this product caused by normal wear, abuse, misuse, unauthorized adjustments or repairs. PetEdge will not be liable for any incidental or consequential damages of any type. Any implied warranty is limited to the one-year period provided in this express warranty. Some states do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. Warranty is void if product has been modified in any manner, repaired by anyone other than PetEdge or has been subject to unreasonable use. Warranty is valid in the United States.

Date Purchased: _____

TP0129 Master Equipment Bone Shaped Electric Table

Manufactured for / Fabricado para / Fabriqué pour
©Tops Pet Products, Beverly, MA 01915
Manufactured in / Fabricado en / Fabriqué à China